



Two of the six IOs are selected by default. To change other IOs, you need to remove the 0R resistor and short-circuit the pad to the corresponding IO.